



AURORA OUTDOOR



Assembly Instructions

Luxe or Sapphire Glider

Tools Needed: hammer, two 1/2" wrenches, #2 square bit driver or power driver. No drilling required. All the necessary holes are predrilled. Bolts fit snugly in the holes. You may need to use a hammer to drive the bolts through the holes.




Parts

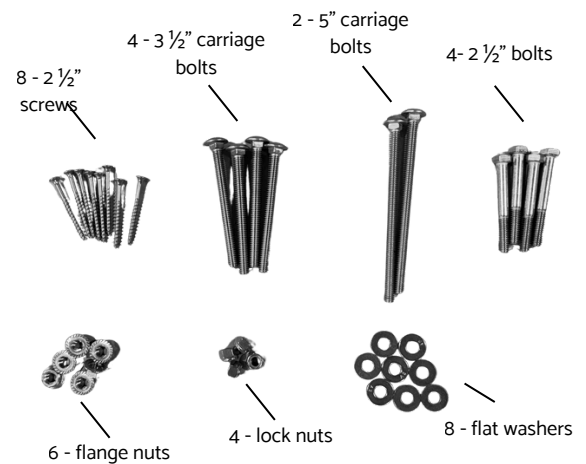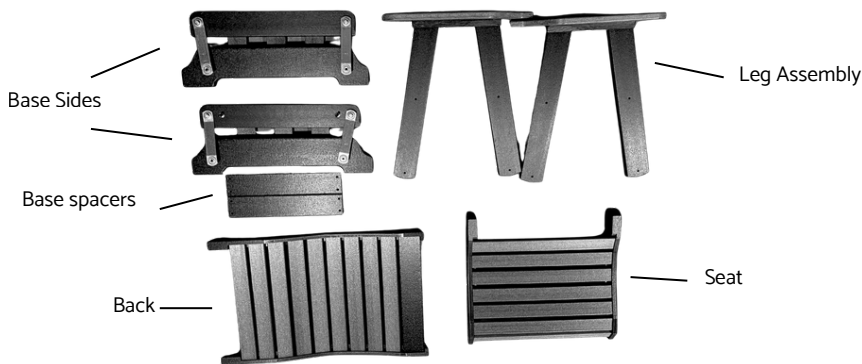

Step 1 - Assemble base

2 1/2" screws, base sides, base spacers

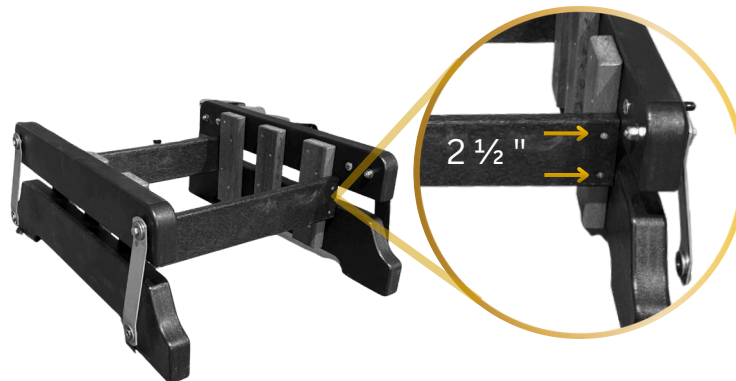

- Place the base pieces on a clean, flat work surface.
- Lay the parts on a protected surface such as cardboard or blankets to assemble them.
- Match the numbers on the base spacers to the numbers on the base sides.
- Fasten with the eight 2 1/2" screws using the pilot holes in the base spacers.

Step 2 - Fasten legs to seat

3 ½ " carriage bolts, 5" carriage bolts, flange nuts



- Place the seat assembly on top of the finished base assembly
- Insert a 3 ½ " carriage bolt through the front leg and seat frame on each side
- Insert a 5" carriage bolt through the back leg and seat frame on each side but DO NOT go past the seat frame yet.
- Tap the front carriage bolts with a hammer to set them firmly against the leg.
- Place flange nuts on the carriage bolts in the front legs and tighten securely.

Step 3 - Fasten back to seat


Back assembly, 3 ½ " carriage bolts, Flange nuts



- Place the back assembly inbetween the seat frame
- Line up the bolt holes on the back with the back legs and seat frame and tap the bolt heads with a hammer to set them firmly against the leg.
- Place flange nuts on the bolts and tighten securely.
- Where the arms meet the back assembly, push 3 ½ " carriage bolts through the pre-drilled hole in the arms and tighten securely with flange nuts.

Step 4 - Attach the base

Base assembly, 2 ½" bolts, flat washers, lock nuts

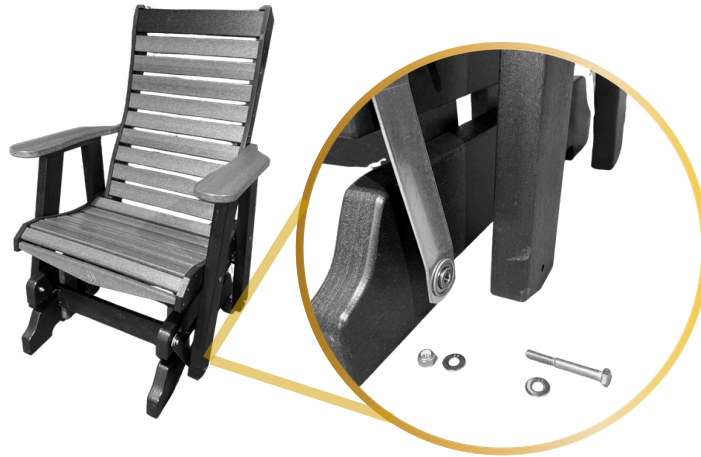

- Place the base assembly underneath the seat roughly in line with the legs.
- Place the hardware in each leg in the following order: bolt, washer, leg, washer, stainless steel swing arm, lock nut.
- Repeat for all 4 legs.
- Tighten the lock nuts securely using the two ½" wrenches.

Congratulations!

Your **Aurora Outdoor Glider**
is ready to enjoy!

